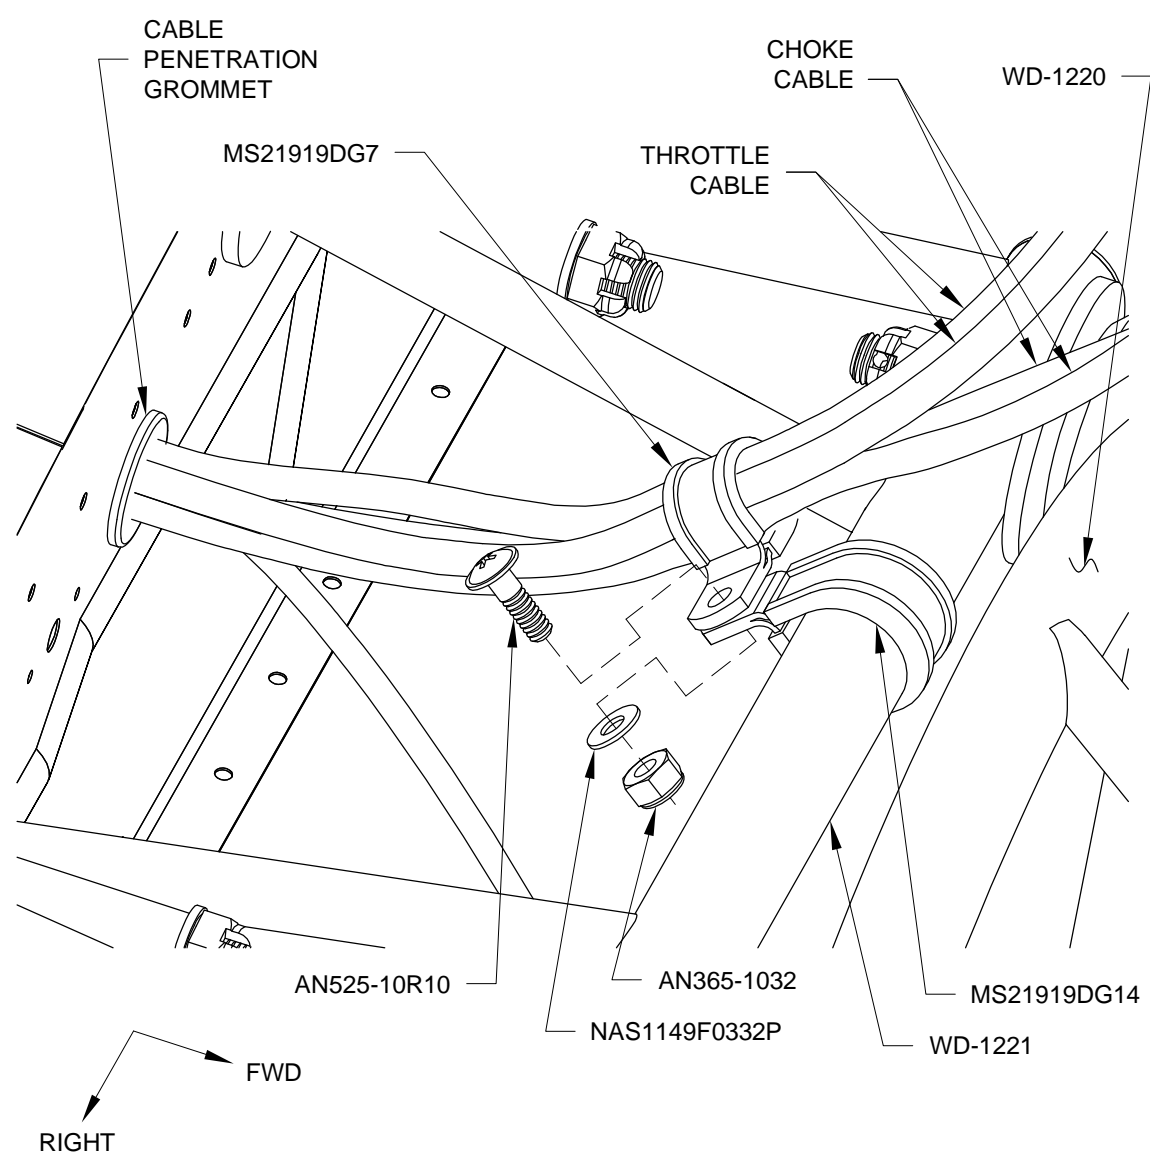


**NOTE: Guide the throttle cables above each of the choke cables. Guide the longer cable of the throttle and choke cables to the right.**

**Step 1:** Capture the Throttle and Choke Cables with the cushioned clamp shown in Figure 1.

**Step 2:** Loosely attach the cushioned clamp with the four cables to the WD-1221 Engine Mount Standoff using another cushioned clamp and the hardware called out in Figure 1. Orient the clamps so that the throttle and choke cables will not contact the WD-1220 Engine Mount Ring as shown in Figure 1, then tighten.



**FIGURE 1:**  
CUSHIONED CLAMP INSTALLATION