



Step 1: Install F-1200B BLACK or WHITE Fuel Placard on the F-1277-R FWD Turtle Deck Skin. See Figure 1.

Step 2: Install the PLA OPEN (RIGHT) on the F-1277A Aft Window. See Figure 1.

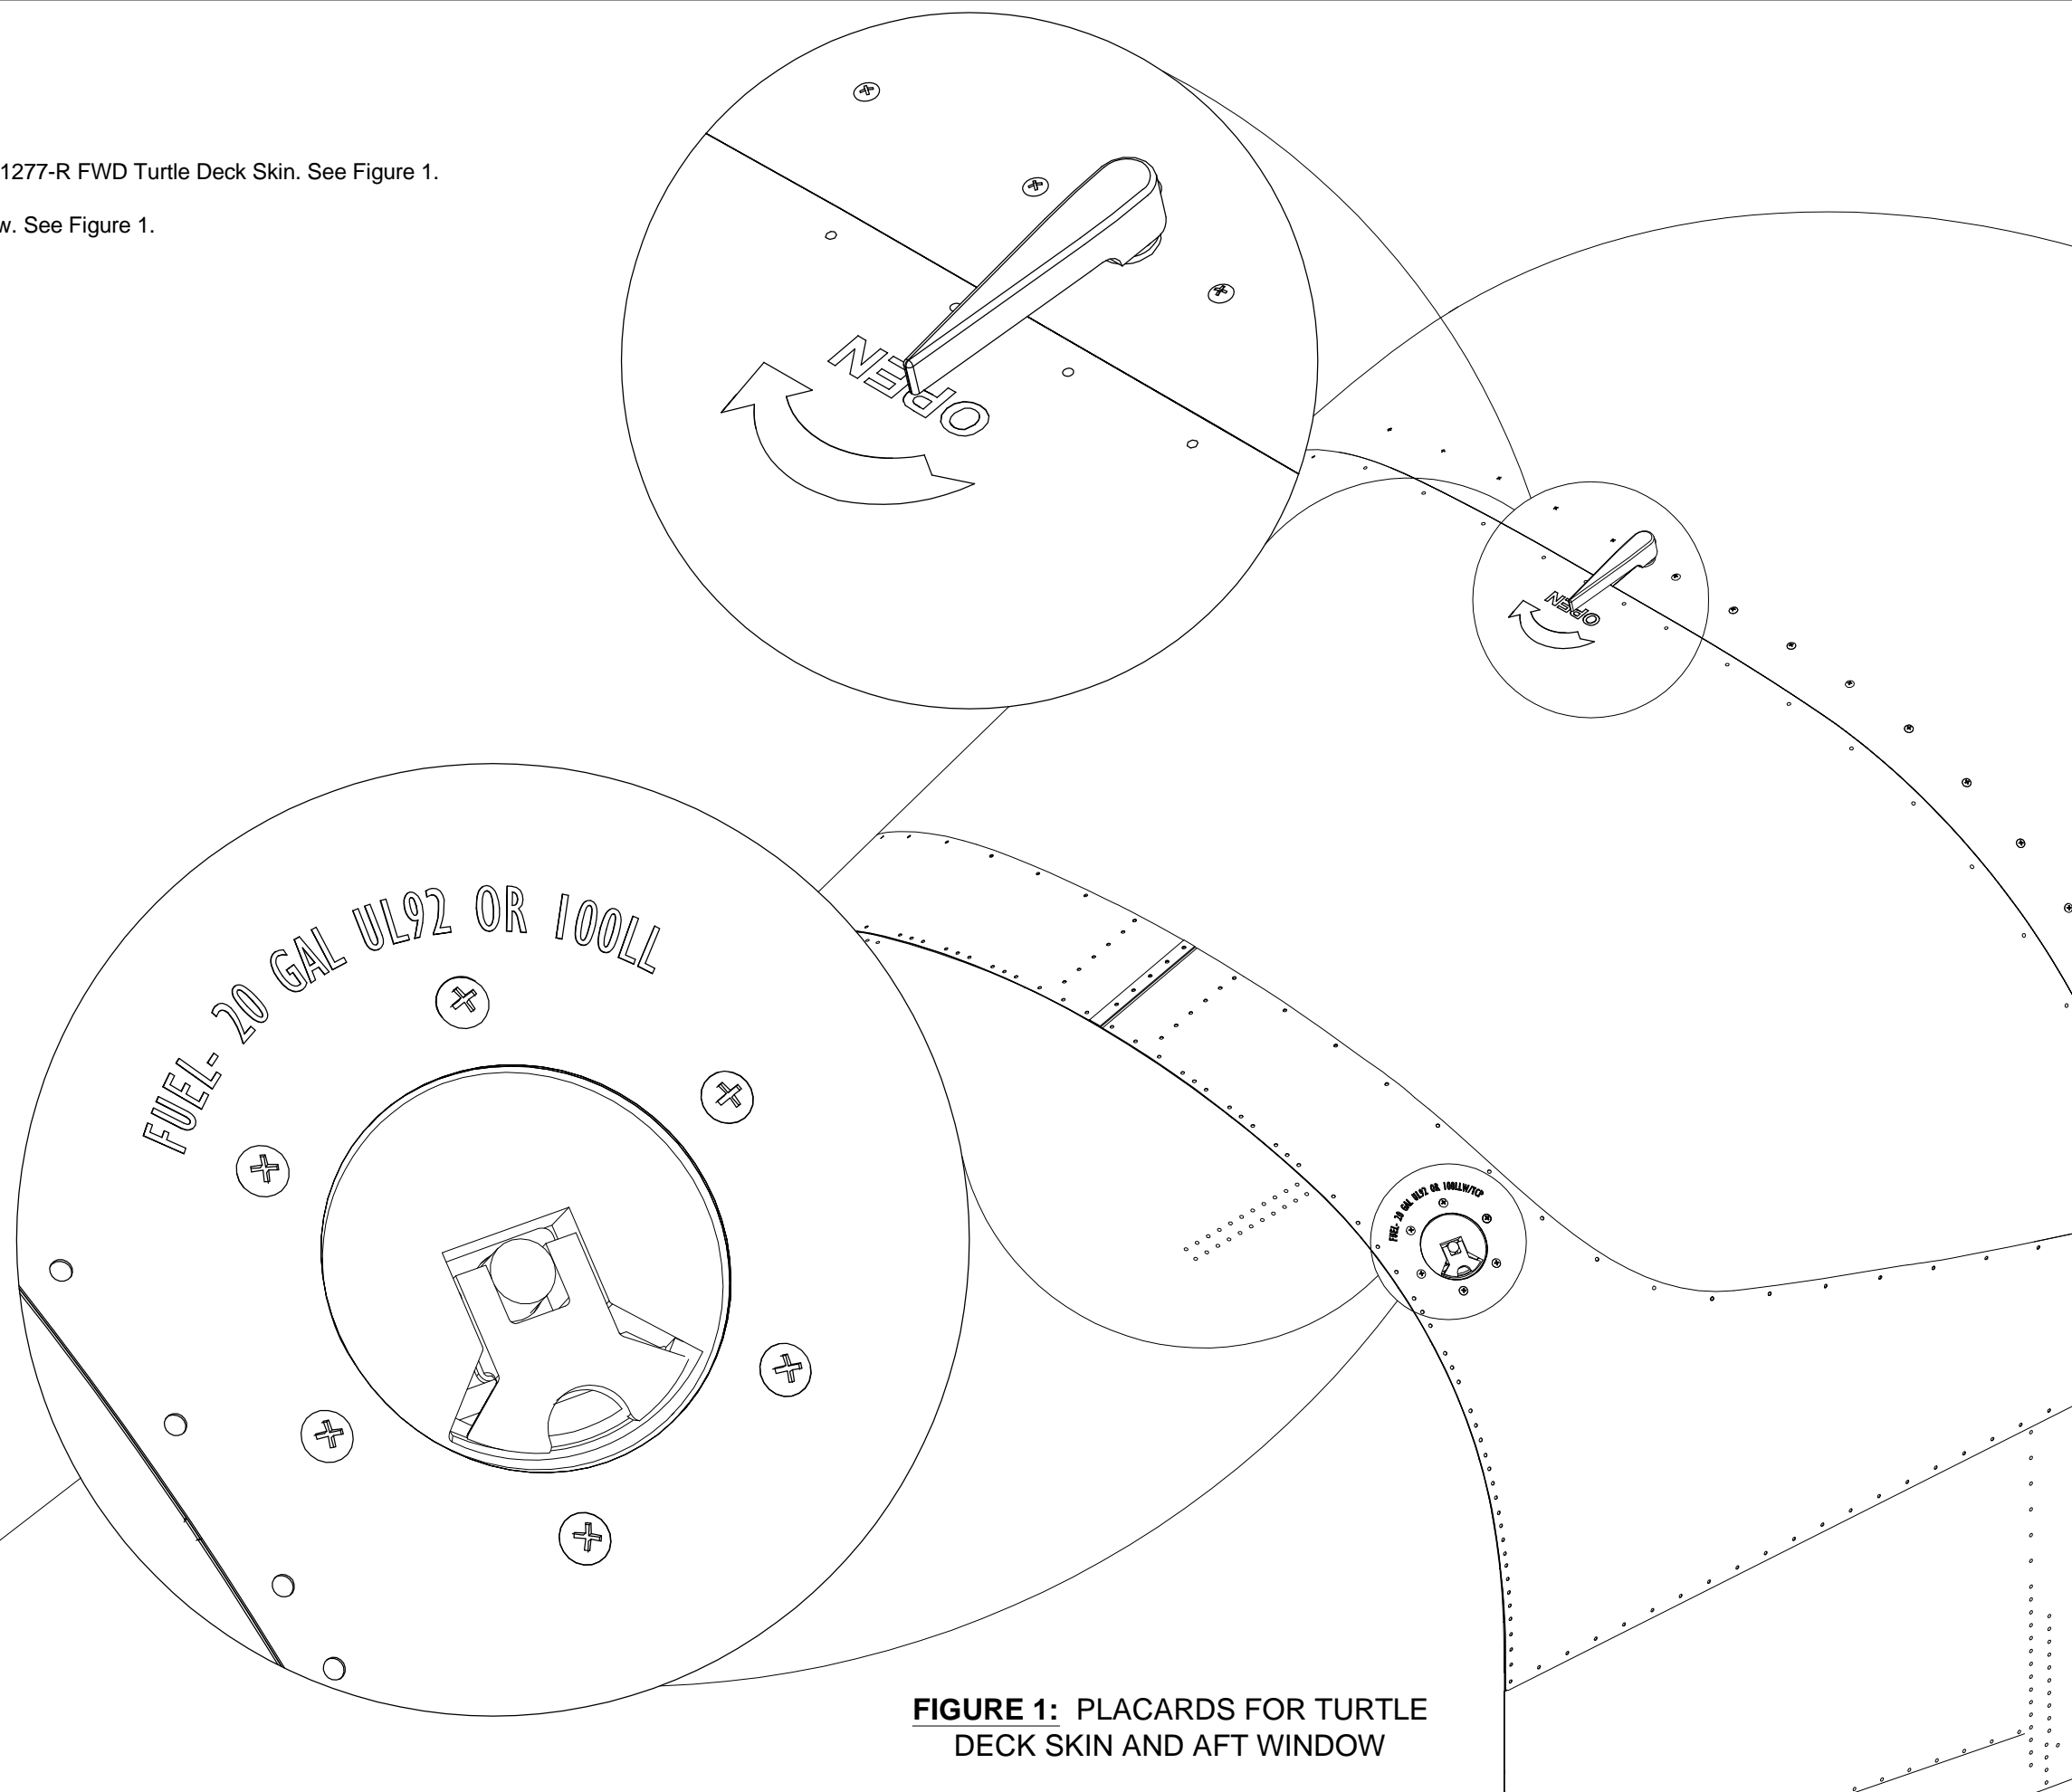


FIGURE 1: PLACARDS FOR TURTLE DECK SKIN AND AFT WINDOW